

AIR EXCHANGER MAINTENANCE

PURPOSE

- Air Exchangers are designed to provide fresh air to your house while exhausting stale, humid air.

EVERY 3 MONTHS

- Unplug unit.
- Remove filters.
- Vacuum off all surface dust.
- Wash filters with mild soap (replace if necessary).
- Rinse and allow filters to dry before reinstalling.
- Check the exterior air intake hood for debris.
- Reconnect power supply.

ANNUALLY

- Unplug unit.
- Clean the heat recovery core as per manufacturer's instructions.
- Inspect the condensation drain.
- Reassemble and reconnect power supply.

EXTREME WEATHER

- Air Exchangers should not be operated in heavy snowstorms or rain with strong winds.
- Ensure exterior air intake hood is not filled with snow.
- Unplug unit and look for snow/ice buildup. Allow to melt and drain through the condensation drain.